

Terminal covers

■ Description

These terminal covers are used as guards to prevent accidental touch with live line terminations. These terminal covers can be fitted to either line or load side.

● Up to 400AF

Short type: BW9BT □ A-S □

- Snap-on fitting

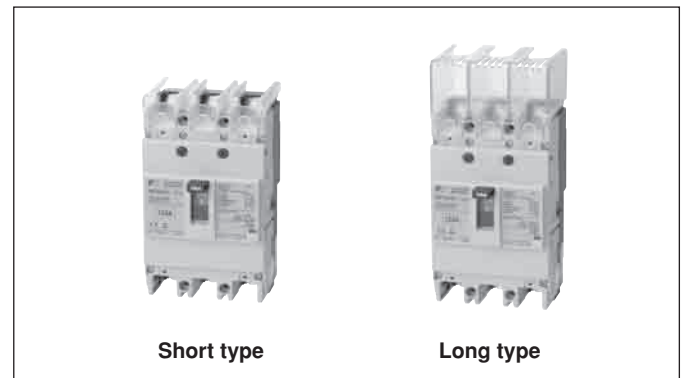
Long type: BW9BT □ A-L □

- Crimp connection use

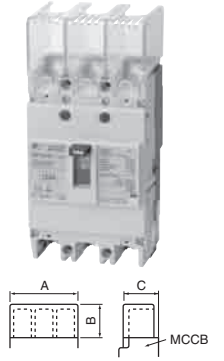
● 630, 800AF

Long type: BW9BTJA-L □

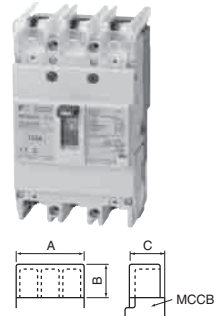
- Transparent



Long type

Type		No. of poles	ELCB	Dimensions (mm)			Packing quantity	Appearance
Transparent	Gray			A	B	C		
BW9BTAA-L2	BW9BTAA-L2W	2	EW32□-2P EW50□-2P	50	40	53	2	• Preventing exposure of live section when amplifier's terminals are connected • Snap-on mounting
BW9BTAA-L3	BW9BTAA-L3W	2, 3	EW32□-3P EW50□-3P EW63□-3P EW100□-2P EW100□-3P	75	40	53	2	
BW9BTCA-L3	BW9BTCA-L3W	3	EW125□-3P	90	40	66.5	2	
BW9BTCA-C3 (For Flat terminal)	—	3	EW125□-3P	90	60	66.5	2	
BW9BTCA-L4	BW9BTCA-L4W	4	EW125□-4P	120	40	66.5	2	
BW9BTGA-L3 * ¹	BW9BTGA-L3W * ¹	3	EW160□-3P EW250□-3P	105	50	66.5	2	
BW9BTGA-L4 * ¹	BW9BTGA-L4W * ¹	4	EW160□-4P EW250□-4P	140	50	66.5	2	
BW9BTGA-C3 (For Flat terminal)	—	3	BW250□-3P	105	75	66.5	2	
BW9BTHA-L3 * ²	BW9BTHA-L3W * ¹	3	EW400□-3P	172	110	98	2	
BW9BTHA-L4 * ²	—	4	EW400□-4P	220	110	98	2	
BW9BTJA-L3	BW9BTJA-L3W	3	EW630□-3P EW800□-3P	230	135	97.5	2	

Short type

Type		No. of poles	ELCB	Dimensions (mm)			Packing quantity	Appearance
Transparent	Gray			A	B	C		
BW9BTAA-S2	BW9BTAA-S2W	2	EW32□-2P EW50□-2P	50	10	53	2	• Preventing exposure of live section when amplifier's terminals are connected • Snap-on mounting
BW9BTAA-S3	BW9BTAA-S3W	2, 3	EW32□-3P EW50□-3P EW63□-3P EW100□-2P EW100□-3P	75	10	53	2	
BW9BTCA-S3P20	BW9BTCA-S3WP20	3	EW125□-3P	90	8	66.5	2	
BW9BTCA-S4P20	BW9BTCA-S4WP20	4	EW125□-4P	120	8	66.5	2	
BW9BTGA-S3P20 * ¹	BW9BTGA-S3WP20 * ¹	3	EW160□-3P EW250□-3P	105	8	66.5	2	
BW9BTGA-S4P20 * ¹	BW9BTGA-S4WP20 * ¹	4	EW160□-4P EW250□-4P	140	8	66.5	2	
BW9BTHA-S3 * ³	BW9BTHA-S3W * ²	2, 3	EW400□-2P EW400□-3P	140	65	98	2	
BW9BTHA-S4 * ³	BW9BTHA-S4W * ²	4	EW400□-4P	185	65	98	2	

Notes: • A gray-white terminal cover comes standard with the Global Series 125AF and 250AF.

*¹ When using the external operating handle, part of the terminal cover () must be cut away.

*² Crimp terminals for 325 mm² are not available.

*³ This type of cover can be mounted on the 400AF when flat terminals are not used.

